

Количество масла, заливаемого в редуктор серии RCV

RCV	Монтажная позиция								
	B3	B5	B6	B7	B8	V1	V3	V5	V6
141	0.16								
191	0.4								
241	0.4								
281	0.7					1.0	1.0	0.7	
381	0.8	0.8	1.5	1.5	2.0	1.0	2.0	1.0	2.0
162	0.18								
202-203	0.55								
252-253	0.7								
302-303	1.3								
352-353	1.3								
452-453	2.5	2.3	2.5	2.5	2	2.9	3.4	3	3.4
552-553	3.8	3.5	3.5	3.5	3	4.5	5.8	5	5.5
602-603	8.5	8.5	8.0	8.0	8.5	12.5	12	12.5	12